 


# WARING™

## CORDLESS LITHIUM ELECTRIC KNIFE

POWERED BY HEAVY-DUTY  
BRUSHLESS DC MOTOR

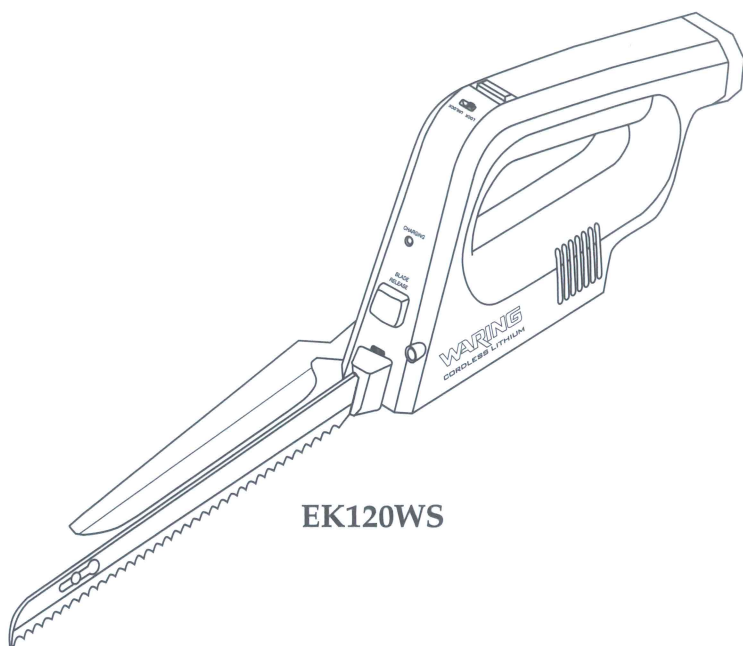

**EK120WS**

For your safety and continued enjoyment of this product,  
always read the instruction book carefully before using

# TABLE OF CONTENTS

Important Safeguards ..... 2

Unpacking Instructions ..... 4

Features & Benefits ..... 4

Assembly Instructions ..... 6

Operating Instructions..... 6

How To Use the Thickness Guide ..... 7

Cleaning & Maintenance ..... 7

Battery Disposal..... 8

Helpful Hints..... 8

## IMPORTANT SAFEGUARDS

When using an electrical appliance, basic safety precautions should always be followed:

1. **READ ALL INSTRUCTIONS.**
2. Blades are sharp. Handle carefully. Always handle blades with hand away from cutting edge. Always store blades with cutting edge away from you.
3. To protect against risk of electrical shock, do not put the knife handle or adapter in water or other liquids. If handle or adapter falls into liquid, unplug the adapter from outlet immediately. Do not reach into the liquid.
4. This appliance should not be used by or near children or individuals with certain disabilities.
5. Ensure safety switch is in the lock position before putting on or taking off parts, and before cleaning.
6. Avoid contact with moving parts. Keep hands, hair, clothing and other utensils away from blade during operation to reduce risk of injury to persons and/or damage to the knife.
7. Do not operate any appliance with a damaged cord or plug, or after the appliance has malfunctioned or has been dropped or damaged in any way or is not operating properly. Return the appliance to the nearest authorized service center for examination, repair, mechanical or electrical adjustments.
8. The use of attachments not recommended or provided by Waring may cause fire, electrical shock, or risk of injury.

9. Do not use outdoors or anywhere the cord, adapter or knife might come into contact with water while in use.
10. To avoid the possibility of the knife being accidentally pulled off work area, which could result in personal injury or damage to the knife, do not let cord hang over edge of table or counter.
11. To avoid damage to cord and possible fire or electrocution hazard, do not let cord come into contact with hot surfaces, including a stove.
12. Do not operate knife in water or under running water.
13. This product contains Li-ion batteries. Do not incinerate or compost batteries, as they will explode at high temperatures.
14. Use only the power adapter (9.0VDC–850mA output) as supplied with this product.
15. Do not operate your appliance in an appliance garage or under a wall cabinet. **When storing in an appliance garage, always unplug the unit from the electrical outlet.** Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.
16. Do NOT operate the knife in dimly lit areas or without proper lighting. LED guide light is for additional illumination only.
17. Do not attempt to cut through bones.

This appliance is for 120 volts only and should not be used with a converter.

## SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

# UNPACKING INSTRUCTIONS

## IMPORTANT – PLEASE READ

This package contains a Waring™ Cordless Lithium Electric Knife with the following parts:

- Knife main housing
- Carving blade
- Bread blade
- Thumb screw
- Thickness guide
- Power adapter
- Carrying/storage case

To avoid any injury to yourself or damage to the Waring™ Cordless Lithium Electric Knife, please follow these unpacking instructions:

1. Place the gift box containing your Waring™ Cordless Lithium Electric Knife on a flat, sturdy surface before unpacking.
2. Remove all printed materials.
3. Turn the box on its side and slide the storage case out, including packing materials.
4. Place the unit on a counter or table and read the instructions thoroughly before using.
5. Save packing materials and inserts for later use.

## FEATURES & BENEFITS

1. **ON/OFF Control:** One-touch pressure-activated ON/OFF thumb control for simple operation. Convenient for left-or right-hand use.
2. **Handle:** Ergonomic handle reduces fatigue from long periods of use.
3. **LED Guide Light:** Adds additional light to the cutting area for maximum illumination.
4. **Blade Release Button:** Easily insert, remove or change blades.
5. **Blades:** Two full-size blades: (A) carving blade and (B) bread blade.
6. **Safety Switch:** One touch locks or unlocks the ON/OFF control for safety. Keep the safety switch locked when knife is not in use and when changing blades.
7. **Carrying/Storage Case:** Safely and securely stores your electric knife when not in use. A small opening on side allows cord to be connected to the knife so it can charge while stored in the case.
- 7a. **Lid Interlock Tab**



8. **Charging Indicator Light:**

Light will illuminate red when battery is low, yellow when charging, and green when charge is complete.

 
 
 
9. **Thickness Guide:**

Adjustable thickness guide helps ensure every cut is consistent, whether cutting thick or thin slices.

10. **Thumb Screw:** Used to secure thickness guide to housing.



11. **Adapter**

BPA Free: All parts that come into contact with food are BPA free.

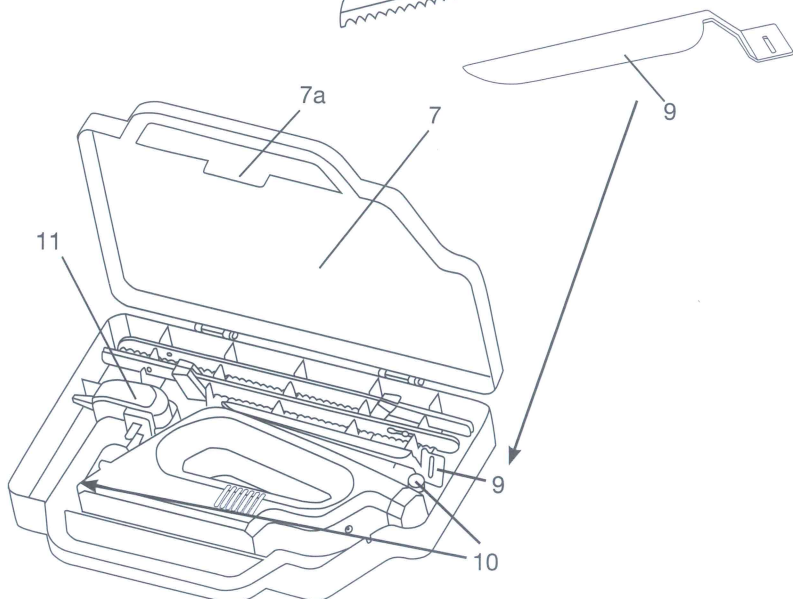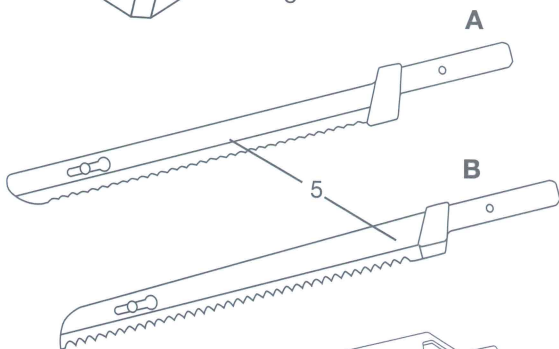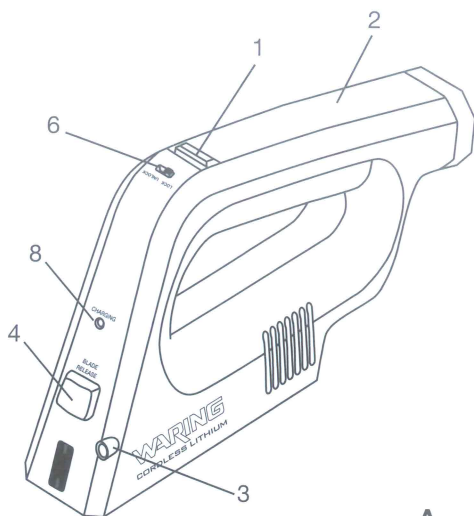

## ASSEMBLY INSTRUCTIONS

  1. Place storage case on a flat surface with Waring logo facing up. Open lid by lifting interlock tab between handles. Lift top to open.
2. Carefully remove blades from storage case. Before first use, separate the blades and wash them in hot, soapy water or in the dishwasher. **CAUTION: BLADES ARE SHARP. HANDLE WITH CARE.** Dry thoroughly.
3. Attach the blades by inserting the rivet on one blade into the keyhole of the other blade.

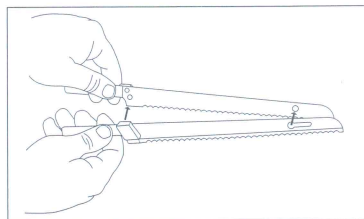
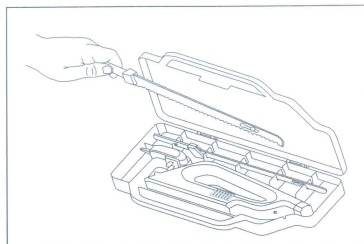


## OPERATING INSTRUCTIONS

1. Be sure to fully charge your electric knife for 4 hours prior to first use.
2. The blades must be assembled before fitting into knife.

**Caution:** Always engage safety switch before handling blades or blade guide.

  Holding the blades with the serrated edge away from you, insert blades until you hear a click. The blades may not line up evenly when properly inserted.

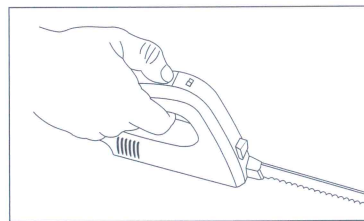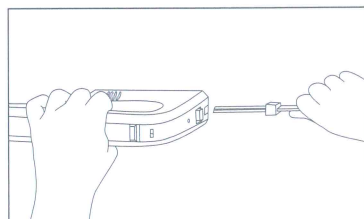

**Caution:** The blades are very sharp; be careful when handling them.

3. Slide the safety switch to the unlock position and press/hold the thumb control to activate the electric knife.
4. Press and hold the thumb control as you cut, keeping the blade straight so thickness of slices is consistent.

**Caution:** NEVER place your hand on top of the blade to support it while operating the knife as the blades are designed to move back and forth.

5. Blade automatically stops when ON/OFF control is released.

# HOW TO USE THE THICKNESS GUIDE

The adjustable thickness guide is to be used as an optional tool to ensure slices remain consistent and uniform. Use of the thickness guide is not required to operate the knife and can be stored in the provided carrying/storage case until necessary.

## Attaching/Adjusting the Thickness Guide

To attach the thickness guide to your knife, first ensure the safety switch is in the locked position. Looking at the bottom of the unit, attach the thickness guide by inserting and tightening the provided thumb screw once you have selected the desired thickness (markings are found on the underside of thickness guide, see fig. A and B).

To adjust the thickness guide, loosen thumb screw and slide guide until the desired marking is lined up with the pin (see fig. C). Tighten thumb screw to ensure the guide is securely in place prior to use. During extended periods of use, check every so often to make sure thumb screw does not require re-tightening.

## CLEANING & MAINTENANCE

Always engage safety switch after each use or while knife is not in use.

1. **CAUTION:** Engage safety switch to lock position before handling blades. To remove the blades, push the blade release button and grasp the blades with the cutting edge away from you. Slowly pull blades out from knife housing.
2. To wash, remove thickness guide (place screw securely in storage case), and separate the blades by sliding the rivet out of the keyhole. Wash them in hot, soapy water or in the dishwasher and dry thoroughly. Return to carrying/storage case.
3. Clean the handle with a slightly damp cloth and wipe dry.

**Caution:** Do not clean handle with blades in place. Do not immerse the appliance in water or other liquids or place it under running water.

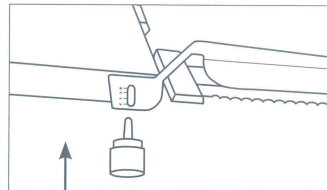 


fig. A

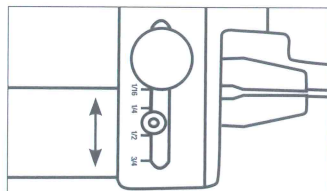 


fig. B

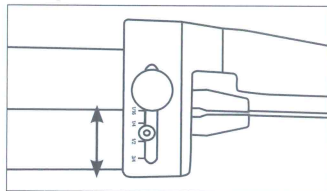 


fig. C

## **CHARGING**

We recommend that you store your appliance in the carrying/storage case when not in use, and be sure to plug knife into outlet while in the case so it is fully charged and always ready for use.

Any other servicing should be performed by an authorized service representative.

## **DISPOSAL/RECYCLING OF BATTERIES**

This product uses two Li-ion rechargeable and recyclable batteries. At the end of the batteries' useful life, they should be recycled. These batteries must not be incinerated or composted.

Li-ion batteries should not be put in municipal waste systems. Contact your local waste collection agency for proper recycling and disposal information for your area.

Please do not attempt to dismantle the knife handle to replace these batteries on your own. Damage could result to the unit.

When it is time to replace and/or recycle the batteries, or to receive additional instructions for disposing of old batteries, call toll free 1-800-492-7464.

## **HELPFUL HINTS**

### **Carving Blade**

The carving blade is very versatile. In addition to slicing meats such as turkey, chicken, salami, ham and roasts, it can also be used to cut fruits like melon and pineapple; vegetables such as squash, eggplant and zucchini, as well as hard cheeses.

### **Bread Blade**

The bread blade glides through loaves for consistent, even slicing. It can also be used to slice bagels and sandwich rolls.

## This image shows a full page of blank, lined paper. It features approximately 20 evenly spaced horizontal blue lines across its entire width. The lines are thin and consistent in color, set against a plain white background. There are no margins, text, or other markings present on the page.



Trademarks or service marks of third parties used herein are  
the trademarks or service marks of their respective owners.

©2014 Waring Consumer Products  
150 Milford Road  
East Windsor, NJ 08520

[www.waringpro.com](http://www.waringpro.com)

Printed in China

EK120WS IB  
14WR005840

F IB-12964